

## 10.2 Self-diagnosis

Codes	Contents
P4	Protection of temperature of indoor evaporator
P5	Protection of temperature of outdoor condenser
P9	Defrosting or anti-cold air
E1	Open-circuit and short-circuit of indoor temperature sensors T1
E2	Temp. sensor T2 on indoor evaporator is open circuit or short circuit
E3	The condenser temperature sensor T3 is open or short
E6	Protection of outdoor unit

## 10.3 LEDs for the indication of outdoor trouble(only for 48K)

Their codes are listed in the following table:

Type	LED1	LED2	LED3	Contents	Indication
Trouble	Off	Off	On	OK	E6
Trouble	On	Off	On	Phase sequence error	E6
Trouble	Off	On	On	Overload of current	E6
Trouble	On	On	On	Lack of phase	E6
Trouble	flash at a frequency of 1 Hz	Off	On	Suction pressure protection	E6