


7. TROUBLE SHOOTING

MOEDL:YXE-C01U

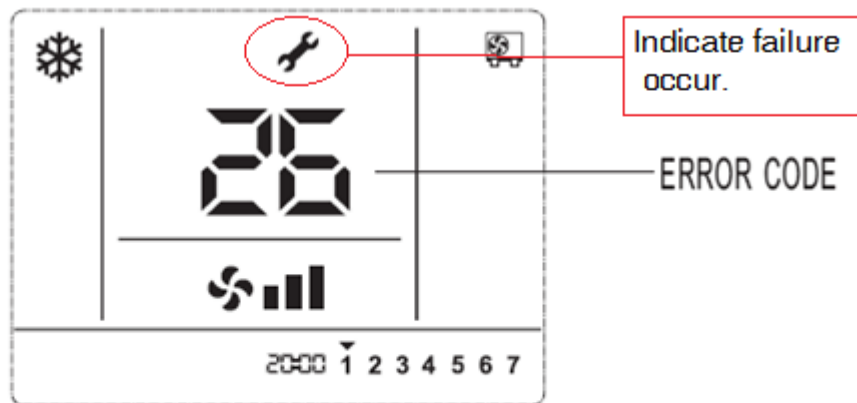

When the airconditioner is malfunction,  will display on the LCD, and error codes will appear and blink.

FIG.2 ERROR CODE DISPLAY ON WIRE REMOT CONTROLLER

(2) CHECK ERROR CODES BY DISPLAY PANEL(CASSETTE type and CEILING & FLOOR type)

Display by lamp indicator


Lamp RUN(LED2 ,red) and Lamp DEFROST (LED5 ,green) flashing, Lamp RUN display fault code ten digit number, lamp DEFROST display fault code single digit number (as shown fig. below).

For example, fault code 36: led RUN & defrost flash 3 times at the same time, and led DEFROST continue flash 3 times, reports No. 36 fault.

7. TROUBLE SHOOTING

CASSETTE TYPE

Display Panel-12K,18K

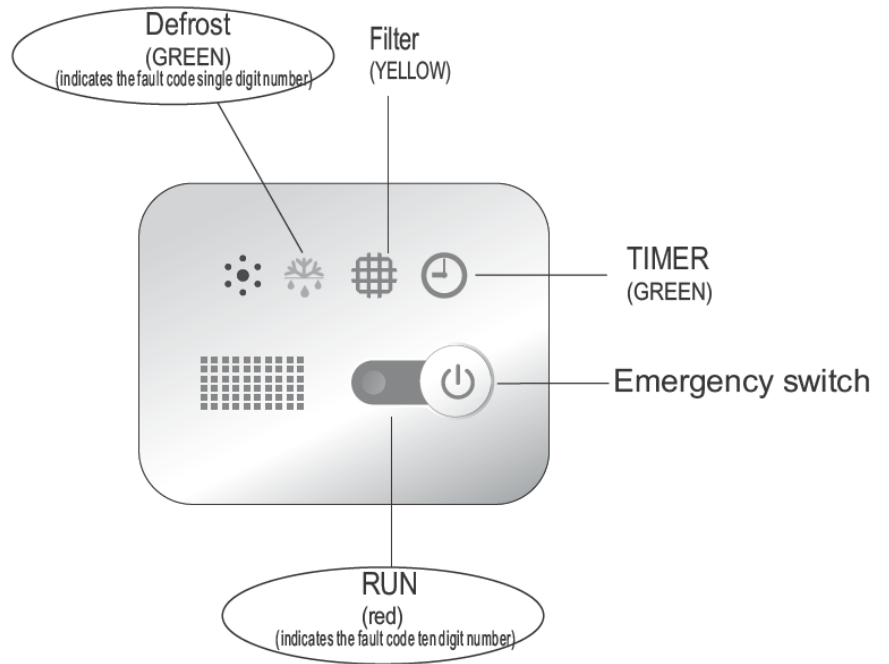

Display Panel-24K,36K,48K

